



Barjo Bespoke Car Cage Assembly Instructions

Before starting the assembly please read the instructions fully. Barjo recommends the assembly or dismantling of dog cages should be carried out by only one person to prevent the possibility of trapping fingers. Folded flat dog cages are not toys and should not be played with by children.

Barjo Cages & Guards Limited cannot accept responsibility for any damage incurred while fitting or from use of the dog cage. If the person assembling the dog cage has any doubt about the assembly, please contact a member of the team on Tel: 01189 890 240 from Monday to Friday (09.00 – 17.00) or via email info@barjo.co.uk

External Assembly

1. Remove packaging and unfold the dog cage onto a clean flat surface. The front panel may have the lid attached.
2. Raise the back panel and locate into the lower corner clips. Flex the panel and locate the centre clip, repeat with the remaining upper clip(s), weaving them into place.



3. Locate the front panel and raise the lid. Align the flat plates on the lid to the plates on the back panel and secure each side with 6mm screw and wingnut.
4. If a divider panel is supplied with the dog cage, place through the door, align the flat plates with the holes and secure with 6mm bolt and wingnut.
5. To dismantle the dog cage, reverse the above operation.

Congratulations your Barjo dog cage is now ready to use.



Internal Assembly

Owing to the design of some vehicles and to gain maximum floor space the vehicle is manufactured with a raised sill, therefore the dog cage must be assembled inside the vehicle.

Barjo recommend that you first carry out the external assembly procedure outside the vehicle to gain experience of the dog cage's assembly.

Fold down rear seats, place dog cage flat into vehicle and assemble as above through the boot opening and rear passenger doors. With the dog cage in place, return seats to upright position.

Dog Cage Escape Doors

There are two different types of escape doors. It is important that you and your passengers are aware of the operation of these doors. It is also important that these doors are not obstructed and that they are opened or removed occasionally and moving parts (i.e. catches) lubricated with light oil. (WD40 OR 3 IN 1)

1. Hinged Escape Door

These are the same as the front entry doors and are opened by the slide bolt. In the event of an obstruction, to fully open, they will lift off from the hinges once slightly open.

2. Lift Off Escape Door

These doors are secured by a 6mm wing nut. To remove undo wing nut and lift door panel off.

Emergency Window Stickers

Your Barjo dog cage is fitted with escape doors. Barjo has received a report of the emergency services destroying a vehicle to gain access to the dogs in a dog cage as they could not gain access through the boot opening. The vehicle was fitted with escape doors but the Emergency Services were not aware. The enclosed stickers are to place in your vehicle rear side windows and Barjo strongly recommends you display these.

Maintenance of Your Dog Cage

To clean your dog cage, use a weak solution of waxed car shampoo then dry fully. With all moving parts treat with WD40 or a light machine oil.