


## **Barjo Bespoke Tailgate Guard Fitting Instructions** **Ford Focus 2005-2011**

Before starting the tailgate guard fitting please read the instructions fully. Barjo recommends the fitter has an assistant to help fit the guard.

Barjo Cages & Guards Limited cannot accept responsibility for any damage incurred while fitting or from use of the tailgate guard. If the person fitting the tailgate guard has any doubt about the fitting, please contact a member of the Barjo team on Tel: 01189 890 240 from Monday to Friday (09.00 – 17.00) or via email [info@barjo.co.uk](mailto:info@barjo.co.uk)

Before starting, remove any boot liners or matting from your boot. The guard will not fit properly with these sat underneath. You will be able to adjust the liners/matting to shape around the guard after it is fitted.

Open the vehicle's boot and locate two screw covers on the inside headlining about 16" apart. Carefully lift off these covers using a small flat head screwdriver.

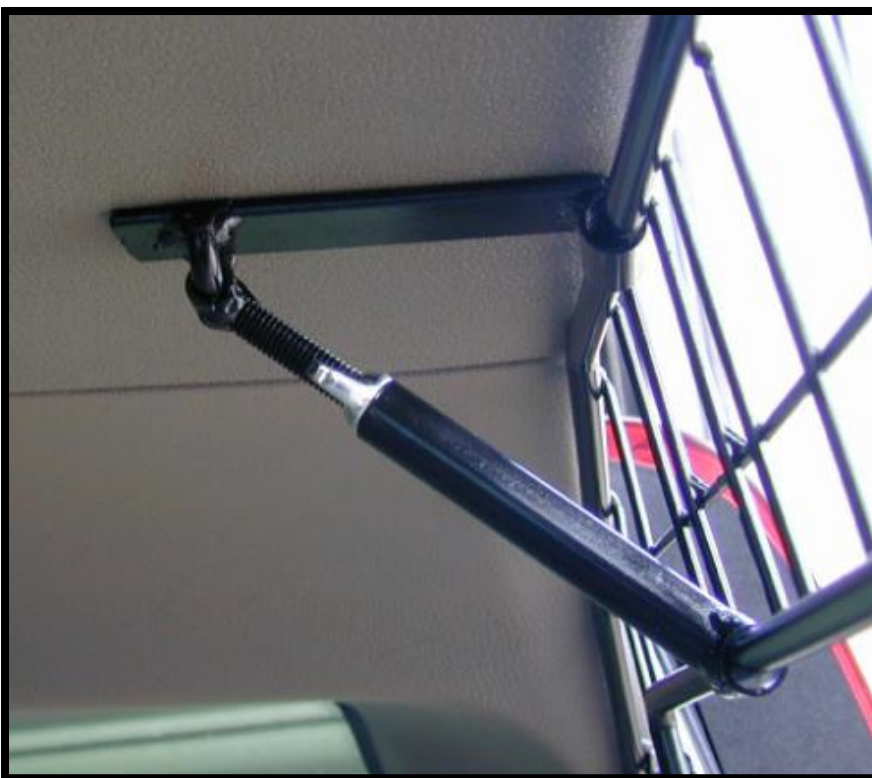

Remove the door from the tailgate guard by lifting it off the pin hinges. Put the guard into the boot, placing the bottom corners in first.

Assemble the self-support mechanism (as shown in picture). Then locate the two pins into the holes where the screw caps have been removed.

Tighten the wingnuts clockwise to secure the self-support mechanism.

Replace the tailgate door and your Barjo tailgate guard is now ready for use.

To remove the guard, perform these instructions in reverse.

To clean your guard, use a weak solution of waxed car shampoo then dry fully. With all moving parts treat with WD40 or a light machine oil.